


TO ORDER AIR SHAFT AIR TUBES (BLADDERS)

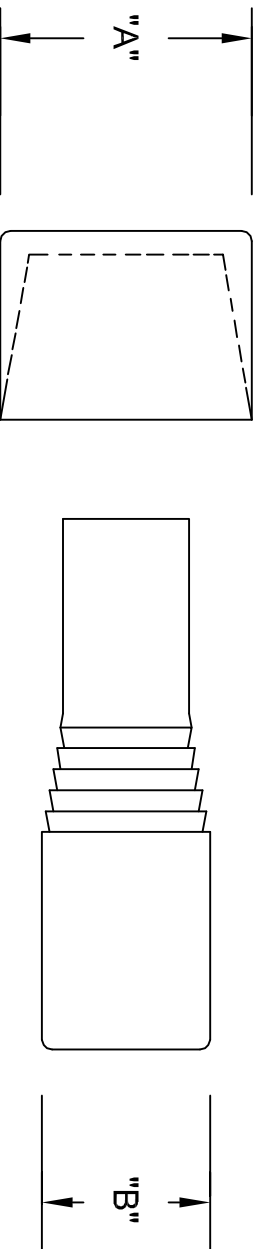


FOR WEBANCOR-TIDLAND-DAVEN ETC.

MEASURE DIMENSION "A" OF END CAP FOR OUTSIDE DIAMETER
 MEASURE DIMENSION "B" OF PLUG FOR INSIDE DIAMETER
 ORDER TUBE TO SAME LENGTH AS BODY OF SHAFT AND TRIM TO
 LENGTH, MAKING SURE END CAPS ARE FULLY INSIDE SOCKET OF JOURNAL.

FOR WEBANCOR SHAFTS USE ABOVE OR ORDER BY SERIAL NUMBER

FOR SLEEVES MEASURE I.D. AND O.D. OF OLD SLEEVE, TAKING INTO ACCOUNT THAT OLD SLEEVE MAY BE SWOLLEN WITH USE. MEASURE UNSWOLLEN PART.

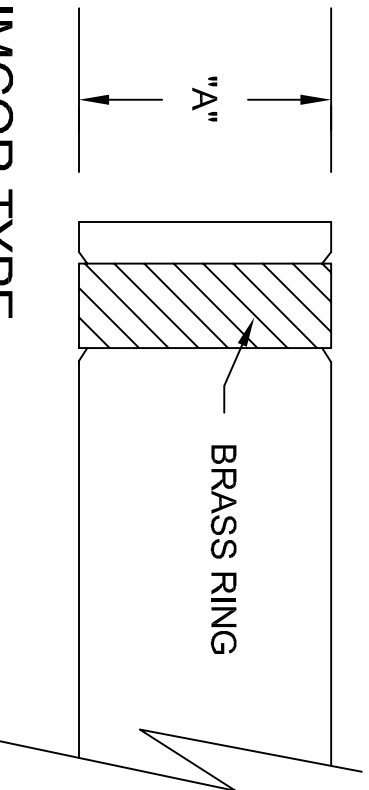

FOR NIMCOR TYPE

MEASURE "A" THE DIAMETER OF THE BRASS RING,
 AND THEN THE LENGTH. IF SIZE IS STILL WRITTEN
 ON BLADDER THEN ORDER BY THAT SIZE.

WEBANCOR

SCALE		REVISIONS		BY	DATE
DATE					
DWN					
CHK'D					
TITLE		Dwg. No			
BLADDERS		BLAD-1			